


PipePillo[®] User Guide

Installation Methods

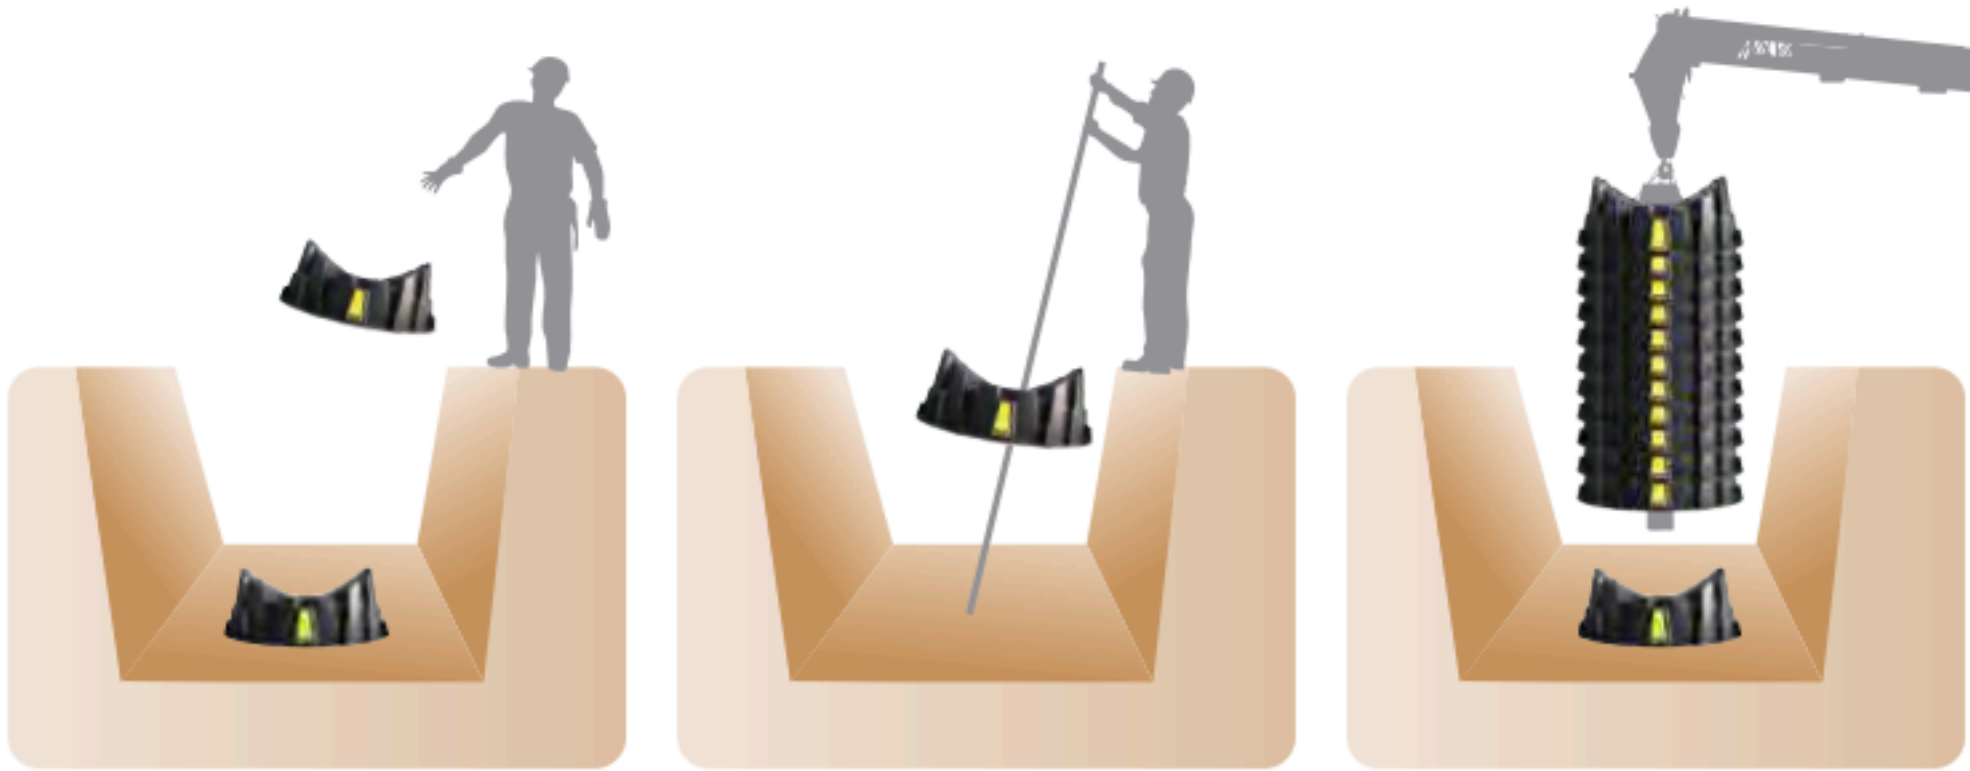


Method 1
Toss & Straighten

Method 2
Slide down

Method 3
PilloPicker[®]

Spacing between PipePillos

Spacing design (A) as supplied by PipeSak are to be considered maximum spacing.

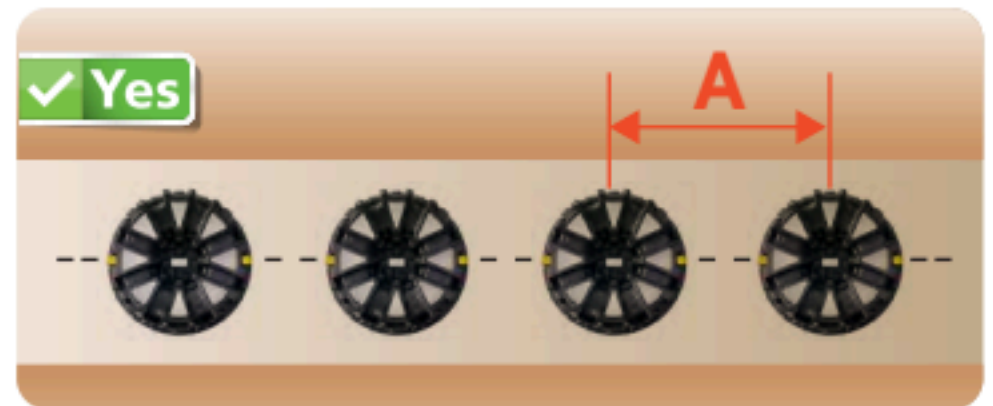

Center PipePillos in trench (± 20 degrees)

Closer spacings should be considered where additional loading is anticipated.

(See reverse page)

Call PipeSak engineers at 1-866-PIPESAK (747-3725) with questions.